


TIGHTNESS TEST

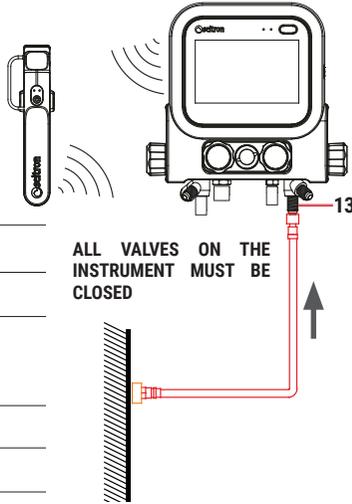


To perform a proper **tightness test**, it is necessary to enable the temperature compensation in the Settings menu, and then **connect the Be Cool Evo T1S temperature probe to the instrument**.

To ensure accurate measurement, it is essential that the probe remains suspended in the air and is not placed on any surface.




- Measurement Screen** – Gauge Display.
- Measurement graph.**
- Parameter settings:**
 - Acceptable leak adjustable from 0% to 100%
 - Test duration adjustable from 5 min to 48 h
 - Temperature Compensation enable/disable
- Start the system tightness test.**
- Stop the system tightness test.**

EVACUATION AND VACUUM DECAY TEST

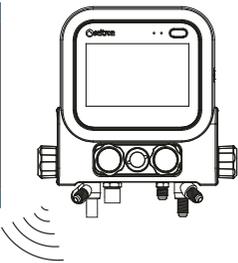

- Measurement screen** - Gauge display.
- Measurement chart.**
- Parameter settings:**
 - Target value adjustable from 50 mTorr to 1000 mTorr
 - Target time adjustable from 1 minute to unlimited
 - Tightness Alarm* adj. from 100 mTorr to 2000 mTorr
 - Tightness Time* adjustable from 30 s to 24 h
- Start vacuum execution and/or vacuum holding.**
- Stop vacuum execution and/or vacuum holding.**

* These two parameters are specific to the execution of the vacuum test.

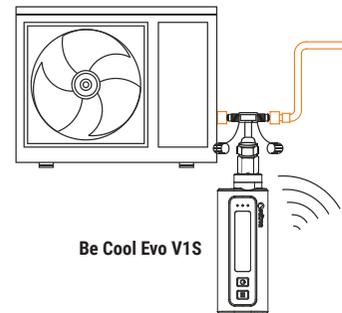

WARNING!
FOR VACUUM EXECUTION AND HOLDING, THE SYSTEM MUST BE FREE OF REFRIGERANT GAS AND A DEDICATED FLEXIBLE HOSE MUST BE USED.

- 1 Verify that the vacuum gauge is connected to the manifold.
- 2 From the main instrument page, access the Vacuum menu.
- 3 Press the key and set the parameters for vacuum execution and holding.
- 4 Turn on the vacuum pump and press the key to start the vacuum measurement.
- 5 When vacuum execution is completed, the display shows one of the following messages:
Target reached: Press Play to continue or **Target not reached.**
- 6 If the target is reached, isolate the vacuum pump from the system.
- 7 Press the key to start the vacuum holding test.
- 8 When the vacuum holding test is completed, the display shows one of the following messages:
"Vacuum holding test successfully completed" / **"Vacuum holding test failed"**.

POFD021001SE 046457 030226



Quick guide

Be Cool Evo Smart Kit



To download the complete manual, scan the QR code.

CONTACT US
customer.care@seitron.it

WHATSAPP
+39 329 1444390

NORTH AND SOUTH AMERICA

CONTACT US
info@seitronamericas.com

PHONE
(215) 660-9777



TECHNICAL FEATURES

Connectivity	Bluetooth®	Bluetooth® comm. range	30 m (98 ft) (max)
Operating temperature	-10 °C - +50 °C (+14 °F - +122 °F)	Operating humidity	+20% - +80% RH non-condensing
Storage temperature	-20 °C - +60 °C (-4 °F - +140 °F)	Storage humidity	+10% - +90% RH non-condensing
Be Cool Evo M4S – 4-Way Digital Manifold Gauge			
Power supply	Rechargeable Li-Ion battery 3.7 Vdc 5200 mAh	Resolution	0,01 bar (0.1 psi)
Charging parameters	5 V 2 A	Accuracy	0,5% Full Scale
Measuring range	-1,00 - +55,00 bar (-14.5 - +800.0 psi)	Protection rating	IP54
Be Cool Evo V1S – Digital Vacuum Gauge			
Power supply	2 x 1,5 V AA batteries	Measuring range	+1 - +20000 micron
Accuracy	+1 - +10000 micron ±10% rdg ±10 micron +10001 - 20000 micron: ±20% rdg	Resolution	1 micron [0 - +9999 micron] 10 micron [+10000 - +20000 micron]
Protection rating	IP54		
Be Cool Evo T1S – Smart Temperature Probe			
Power supply	2 x 1,5 V AAA batteries	Resolution	0,1 °C (0.2 °F)
Sensor type	NTC 10 k ±1% B25/85=3977K ±1%	Accuracy	±1 °C (±2 °F)
Measuring range	-50 °C - 150 °C (-58 °F - +302 °F)	Protection rating	IP54

PAIRING – CONNECTING THE TEMP. PROBE AND/OR VACUUM GAUGE TO THE INSTRUMENT

1. Turn on the devices to be paired: press and hold the key until all LEDs briefly light up, then release the key.
2. Access the Pairing menu on the Be Cool Evo M4S: Settings => Pairing.
3. Click on the icon corresponding to the device you want to pair to start scanning (**Be Cool Evo T1S – A**, **Be Cool Evo T1S – B**, **Be Cool Evo V1S**).
4. Wait 10 seconds and select the row corresponding to the serial number of the Bluetooth® device to pair; the serial number can be found on the device's nameplate, preceded by "S/N:".
5. The instrument will automatically pair with the selected Bluetooth® device. The icon for the paired device will appear in the top bar: **A B V**.


Once paired, the devices will automatically connect when powered on.

LEGEND


- Search for devices (no devices paired): Starts scanning to pair a new device.
- Unpair device: Removes the device from the list of saved devices.
- Connected device: Paired and connected. The icons **A B V** for paired devices appear in the top bar.
- Device not connected: Paired but not connected. The icons for paired but not connected devices appear in the top bar.



MECHANICAL DESCRIPTION

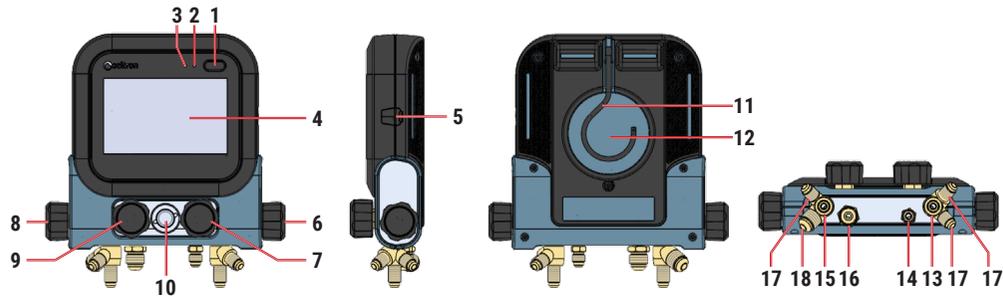

SIMPLIFIED DIAGRAM OF THE MANIFOLD

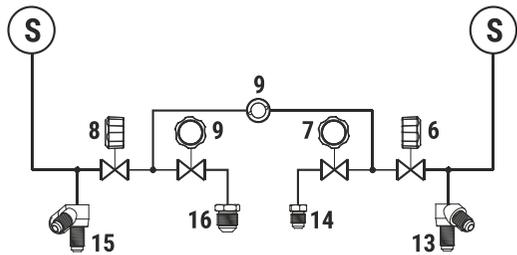

User Interface Description

1	Multifunction key: Press and hold for 3 seconds to turn the instrument on/off. Press and hold for more than 10 seconds to perform an instrument reset.
2	Red LED blinking: low battery Red LED steady on: battery charging. Green LED steady on: battery fully charged (visible only if charging occurs while the instrument is off).
3	White LED: Steady on: Sleep mode (screen off) Slow blink (every 5 s): Bluetooth connected Fast intermittent blink: Bluetooth advertising (sending data packet)
4	TFT color touchscreen display
5	USB Type-C interface (with safety cover)

Manifold Description


6	Right branch high/low pressure valve control knob
7	Right branch refrigerant gas charging valve control knob
8	Left branch high/low pressure valve control knob
9	Left branch valve control knob (fitting with 3/8 SAE connection)
10	Refrigerant gas flow inspection window
13	1/4 SAE fitting for right branch high/low pressure gas line
14	1/4 SAE fitting for refrigerant gas charging line
15	1/4 SAE fitting for left branch high/low pressure gas line
16	3/8 SAE fitting for vacuum pump connection
17	1/4 SAE blind fitting for flexible hose support
18	3/8 SAE blind fitting for flexible hose support
S	Pressure sensor

Other


11	Instrument hanging hook
12	Magnetic section for hook attachment

THE HOSE CONNECTIONS ARE KNURLED AND MUST BE TIGHTENED BY HAND ONLY, WITHOUT THE USE OF TOOLS.

SYSTEM REFRIGERANT EVACUATION

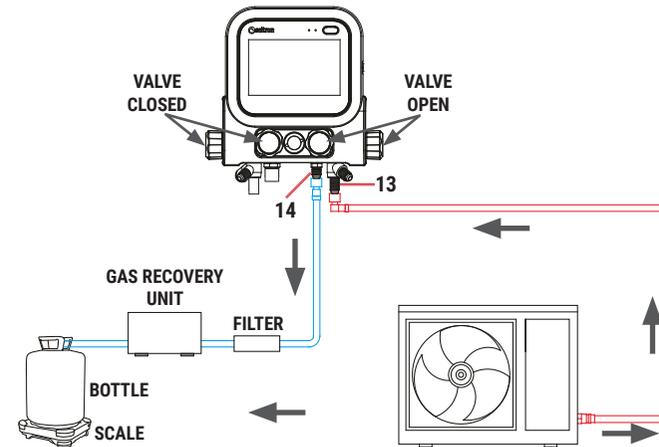


SYSTEM REFRIGERANT CHARGING

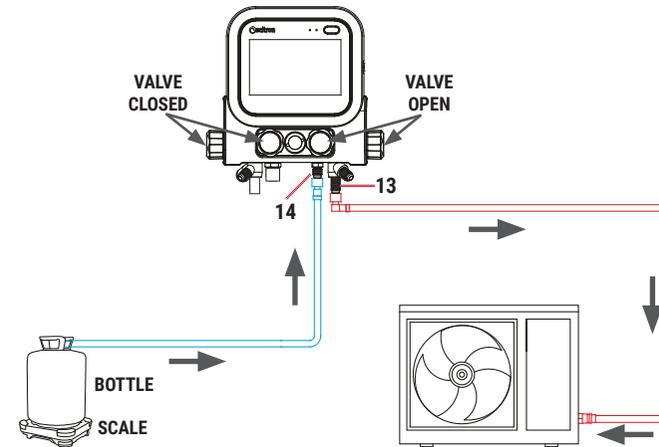

SYSTEM PRESSURE MEASUREMENT



ALL INSTRUMENT VALVES MUST BE CLOSED

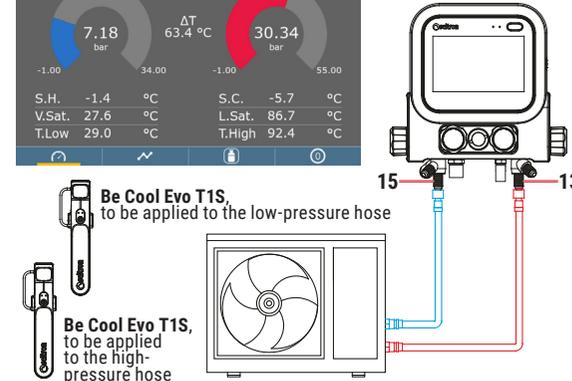

Measurement Screen

Gauge Display
Set the working mode using the arrows .
 Refrigeration: Low-pressure branch.
(Blue gauge: left side of the display)

Heating (Heat Pump):
High-pressure branch.
(Red gauge: left side of the display)

Automatic recognition:
Automatically detects the high- and low-pressure branches and arranges the readings on the screen correctly (low on the left, high on the right), regardless of hose connections.

Measurement graph.

Set the type of refrigerant in use.

Effettua lo zero di pressione.