



PRODUCT FEATURES

- High power 1450 lumen white COB LED, 6500K
- With 150 lumen 6500K white LED flashlight
- Plus 45 lumen Red and Red flash modes
- Powerful 'LG' 3.7v 5000mAh 21700 Li-ion battery
- Super tough copolymer and aluminum construction
- 180° rotating handle/stand with carabiner snap hook
- Strong magnets within the stand
- Glow-in-the-dark strip around reflector for extra visibility
- IPX5 water resistant
- 4 Battery level and charging indicators
- Faster 2A USB-C charging - 3 hour charge time
- 3.2ft high quality USB-C cable included
- Battery can be removed so a convenient spare can be kept at hand
- 21700 li-ion battery has its own USB-C port so is easily charged out of the lamp and used as a 1A Powerbank

BATTERY - 3.7V 5000mAh 21700 Li-ion

WEIGHT - 10.1oz

DIMENSIONS - folded H 4.8 x W 1.9 x D 1.9in
extended H 8.6 x W 1.9 x D 1.9in

ADVICE & IMPORTANT INFORMATION!

- Do not look directly at LEDs.
- Do not operate in direct sunlight or extreme temperature conditions (below -4°F or above 140°F).
- LEDs can become warm/hot when switched on; DO NOT touch and NEVER place face down on any surface – risk of fire! Even once the device has been switched off, DO NOT place face down as the LED/Lens will stay hot/warm for a while.
- Do not use the device if there is any visible damage.
- Do not use the device in the immediate vicinity of flammable materials or gases.
- Take care when charging, check the charging output on the charging source you are using and DO NOT exceed the stated Max charging input or damage may occur to the battery and may void the warranty.
- The rechargeable battery will reach full performance after a few complete charging and discharging cycles.
- To keep the rechargeable battery in optimum condition, it should be recharged every 3-6 months, especially if it is not being used for a long period of time.
- Always fully charge rechargeable batteries before storage and if the rechargeable battery can be removed, this is advised to avoid battery depletion and avoids the risk of a battery leaking.
- Always protect lithium batteries from heat, intense sunlight, fire, water and moisture – danger of explosion!
- If a battery is damaged, fluids can leak out. AVOID contact as this can lead to skin irritation and/or burns. If skin contact occurs, rinse thoroughly with water. If irritation persists, seek medical advice. Seek immediate medical assistance if lithium battery fluid comes into contact with the eyes.
- Children under 12 years of age should only use the product under adult supervision.
- Do not disassemble or attempt to modify the product; this will void the warranty and can be dangerous. Improper use or modification is not covered under the warranty.
- Take care not to let lenses come into contact with hard/sharp objects, damage/scratches to lenses will affect light output.
- Do not use the product in the immediate vicinity of flammable materials or gases.
- Before cleaning the product, disconnect the charge cable. Clean with a dry or slightly moist, clean, lint-free cloth and a mild detergent if required. Do not use cleaners that contain abrasives or solvents.
- This product is water resistant to IPX5 – DO NOT SUBMERGE. If the product has been subjected to excessive moisture/water the warranty may be void.
- This product has a 1 year standard warranty (or extended to 2 years once registered online at WWW.UNILITE.CO.UK/WARRANTY) against manufacturing faults and defects. It does not cover normal wear and tear, modifications, accidental damage or poor maintenance. Unilite warranties do not cover disposable battery leaks or the use of incorrect chargers and cables that can damage rechargeable batteries.
- Do not dispose of this device in normal household waste. It must be disposed of via an authorised electrical appliance disposal centre or at your local waste disposal unit.
- Please re-use or recycle packaging responsibly.
- Keep these instructions for future reference or for subsequent possessors.

ANSI FL1 Standard



Mode	Beam Spread	Light Output (Lumen)	Beam Distance (ft)	Runtime (H)
Floodlight - High	Wide	1450	141ft	3H
Floodlight - Medium	Medium	670	98ft	4H
Floodlight - Low	Narrow	175	49ft	16H
Flashlight	Very Narrow	150	173ft	13H
Red Flood - High	Wide	45	--	11H
Red Flood - Flashing	Wide	45	--	90H


OPERATING INSTRUCTIONS

WHITE MODES:- Floodlight High > Floodlight Medium > Floodlight Low > Flashlight > Off

RED MODES:- High > Flash > Off

[When 'ON' in either WHITE or RED modes, press and HOLD the button for 3-5 seconds to switch to the other mode]

[If left in any mode for over 3-5 seconds, the next press will turn off]

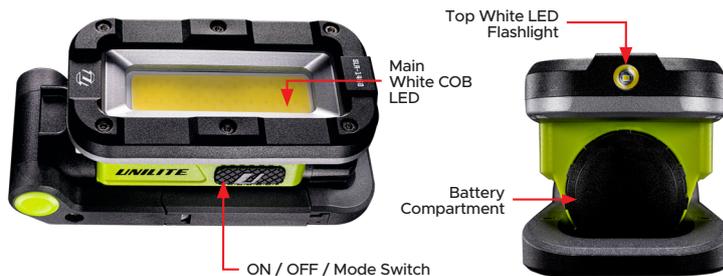

RECHARGING THE LAMP

1. Lift the charging port cover on the side of the lamp.
2. Only use a 5V USB-C cable (max 2A).
3. Plug the USB-C end of the cable into the charge port.
4. Plug the other end of the cable into a USB charging source (do not exceed 5V-2A charging input or damage may occur. Please do not use "Fast Chargers" as this can over-load the battery).
5. The 4x battery indicators on the side of lamp will illuminate and flash to show charging status. Once fully charged, all the indicators will illuminate continually.
6. If the battery indicators do not illuminate, remove the cable and try again.
7. Charge Time: 3 hours
8. Make sure the charge port cover is secured back in place.

(PRODUCT CAN BE USED WHILE RECHARGING)

Warranty void if not used with the specified cable & max charge input

RECHARGING THE 21700 BATTERY

You can recharge the 21700 battery outside of the lamp. This enables a spare to be kept on hand if you require light for an extra long period. Once plugged in, a Red light will appear on the top of the battery to confirm charging. Once fully charged it will turn Green.

21700 POWER BANK

The 21700 battery inside the lamp can be removed and used as a 1A Powerbank via the USB-C port. You will need your own devices charging cable for this. Plug the USB-C end of your devices charging cable into the USB-C port. A Blue light will appear on the top of the battery to confirm your device is being charged.